

How to access your EDID configuration within BIOS for Core Gen 2

Pre-requests connected to the Core Gen 2:

- Keyboard and Mouse
- Display Monitor


To ensure proper access to the BIOS configuration, a system reboot is required. As the device restarts and **before POST begins**, press **F12** on your keyboard.

When this Lenovo image appears on your screen, **immediately select the F12 key** to enter the BIOS configuration menu.




Once the **BIOS Configuration application** launches, the main menu will be displayed on your screen. From this menu, **navigate to and select the *Boot Menu*** to continue with the configuration process.



Knowledgebase Article

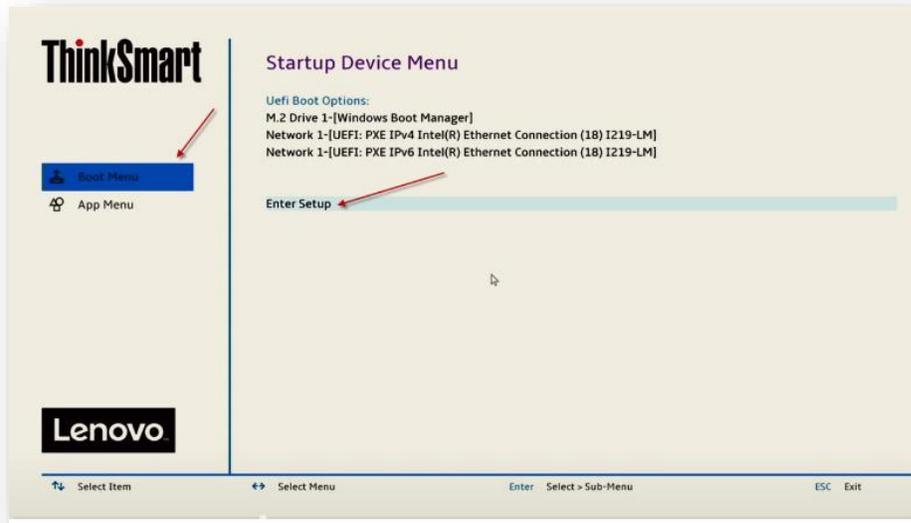

Your next Menu is eh Start menu, then Select Devices:

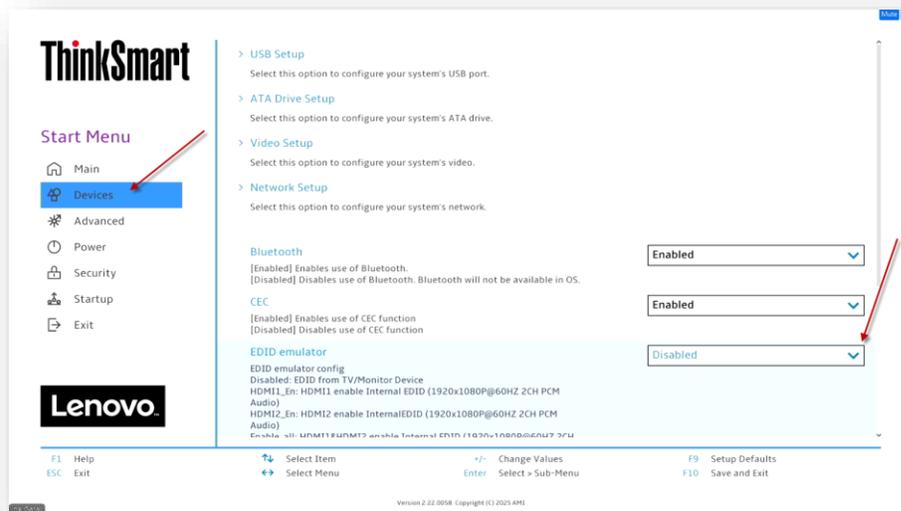

Knowledgebase Article

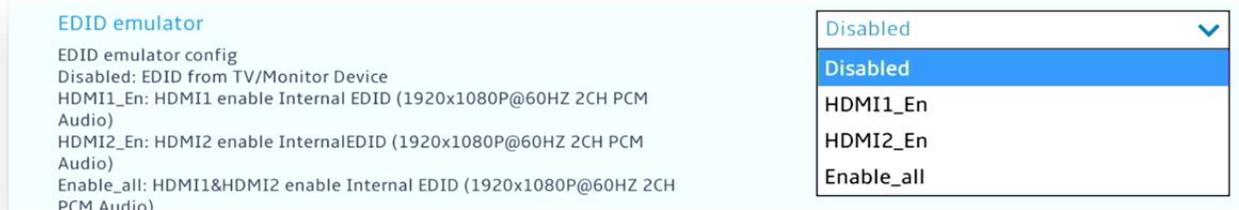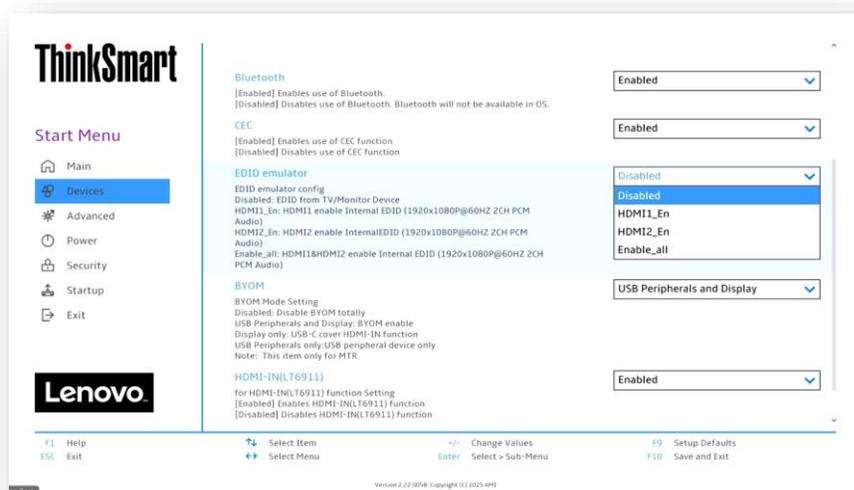

Here are your options that you have to select the configurations on your HDMI interface to your displays in the Room:

❑ Disabled

Uses the real EDID from the connected TV/monitor. No emulation is applied.

❑ HDMI1_En

HDMI 1 uses an **internal EDID**:

- 1920×1080 @ 60 Hz
- 2-channel PCM audio

❑ HDMI2_En

HDMI 2 uses the same type of **internal EDID**:

- 1920×1080 @ 60 Hz
- 2-channel PCM audio

❑ Enable_all

Both HDMI 1 and HDMI 2 use the internal EDID simultaneously.