


Knowledgebase Article

NOTE: These instructions need to access the MRT's administrator's login screen.

- 1.) Access the MTR and connect a Keyboard to the System.
- 2.) You should be within the MTR main screen:

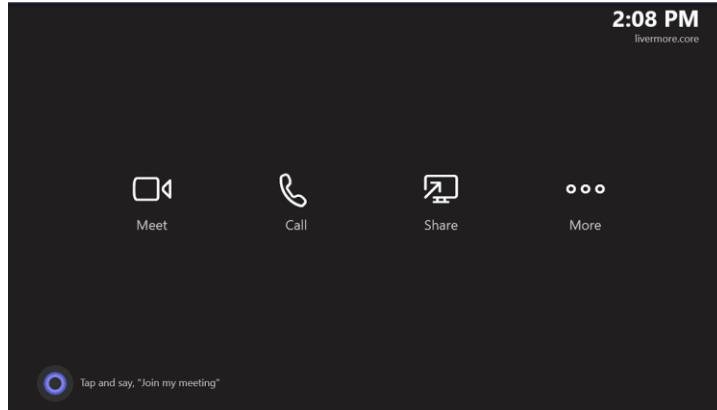

- 3.) With the Keyboard attached to the MTR, please select the windows key and click on it 5 times.



- 4.) The Screen will show the Administrator login access, Please Log into as Administrator:

