
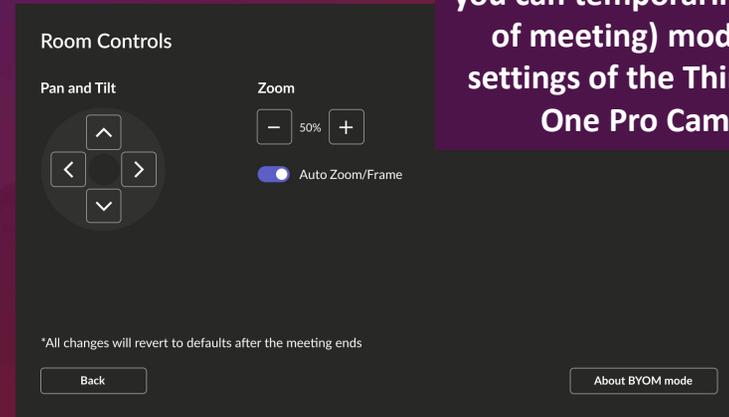


USB Mode: Coexistence of Cam Plugin and USB Mode

ThinkSmart One Pro: Touch Controller Visual Flow (MTR only)

During meetings

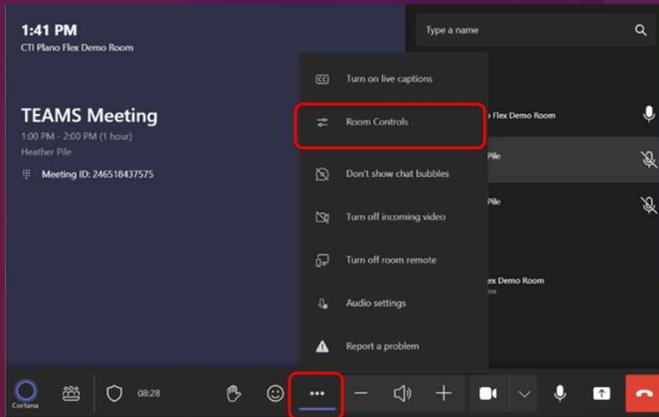

you can temporarily (till end of meeting) modify the settings of the ThinkSmart One Pro Camera

Outside of meetings



Note: pressing "Room Control" outside of meetings/calls has no effect on camera settings

You can access USB Mode instructions



USB Mode: Coexistence of Cam Plugin and USB Mode

ThinkSmart One Pro: Touch Controller Visual Flow (MTR only)

About BYOM mode



Not to enter USB Mode, just to show instructions

ThinkSmart

For more information scan the QR code or visit support.lenovo.com/solutions/tsm



To Enter BYOM Mode



⚠ Once in BYOM mode, please follow the steps for a proper exit

Back

USB Mode: Coexistence of Cam Plugin and USB Mode

ThinkSmart One Pro: Touch Controller Visual Flow (MTR only)

While in USB Mode ...

TS Manager claimed device

US MV B7 2S-H14 VP TEAM ROOM 8S SD (I)
03/21/2024 03:45PM

Room Location | **Mode**
Morrisville, NC | BYOM

For more information scan the QR code or visit support.lenovo.com/solutions/tsm

Select Lenovo ThinkSmart Audio and Lenovo ThinkSmart Cam to use room's A/V for your PC-hosted meeting.
⚠ Please ensure to exit BYOM mode at the end of the session.

To Exit BYOM Mode

- 1  Press and hold + and - volume buttons for 3 seconds
- 2  Unplug USB-A cable from the host computer (recommended)
-  Default mode is ON when the bar is white and the clock shows time

TS Manager unclaimed device

[ThinkSmart One]
03/21/2024 03:45PM

Machine Type | **Serial Number** | **Mode**
11LR | PF123456 | BYOM

For more information scan the QR code or visit support.lenovo.com/solutions/tsm

Select Lenovo ThinkSmart Audio and Lenovo ThinkSmart Cam to use room's A/V for your PC-hosted meeting.
⚠ Please ensure to exit BYOM mode at the end of the session.

To Exit BYOM Mode

- 1  Press and hold + and - volume buttons for 3 seconds
- 2  Unplug USB-A cable from the host computer (recommended)
-  Default mode is ON when the bar is white and the clock shows time

- In USB Mode camera settings are under control of the laptop
- Please note if you use Cam Control App (<https://support.lenovo.com/us/en/downloads/ds548893-thinksmart-camera-control-app-thinksmart-cam>) from the laptop, setting changes become permanent